

Beomaster 4500 in a Link room

A Beomaster 4500 with software ver 1.x can work in a link room setup. The Beomaster has to be set to A.opt. 1.6 (responds to audio commands) or 2.6 responds to both audio and video commands).

As special audio aux cable with the sound connections crossed is needed to make the connection to a Beolink Video MKII 1615 which connects it to a Masterlink setup.

A Masterlink audio master has to be present in the Master link network for the setup to work

The Beomaster 4500 can use it's own sources by regular audio source commands, and in addition use the sources of the audio master by pressing LINK before and audio source command.



LINK +

**RADIO
PHONO
CD
A.TAPE
A.MEM**

Beomaster 4500 SW 1.x (A.OPT 1.6)



Special 7 Pin Audio
Aux Link cable**


AAL



BEOLINK VIDEO
MKII 1615

ML

MASTER LINK *

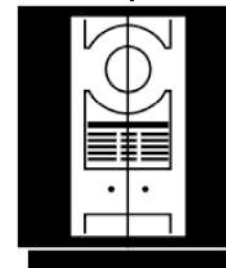

Masterlink
Audio Master

* Additional Masterlink link room products like Beolab 2000, Beolink Active, Beolink Passive or Beovision can also be used or added in this setup

** Pinout of special Audio Aux Cable when used for a link room

