


## Sources for stand alone link room speakers 2

A Masterlink Link room product like the Beolab 3500 can work as a stand alone system by attaching a Beolink converter type 1611 or 1612 to the Masterlink connection.

The AAL connector on the Beolink Converter will be activated by an Audio or video source command. The Link room speaker has to be set to L.OPT 6 to be able to receive both audio and video commands.

A MCL2AV (L.OPT 2.5) connected to the AAL connector on the Beolink converter makes it possible to activate several different non B&O sound inputs by using various commands. When B&O datalink compatible equipment is not used the TAPE and CD inputs on the MCL2AV changes commands to A.AUX + 6 and 7 respectively

All other Audio commands like RADIO, CD, Tape and PHONO will be redirected to the screw terminal connector on the inside of the MCL2AV. It is possible to connect an extra audio source by connecting to the L, R and ground terminals. Sound quality for this connections may vary.

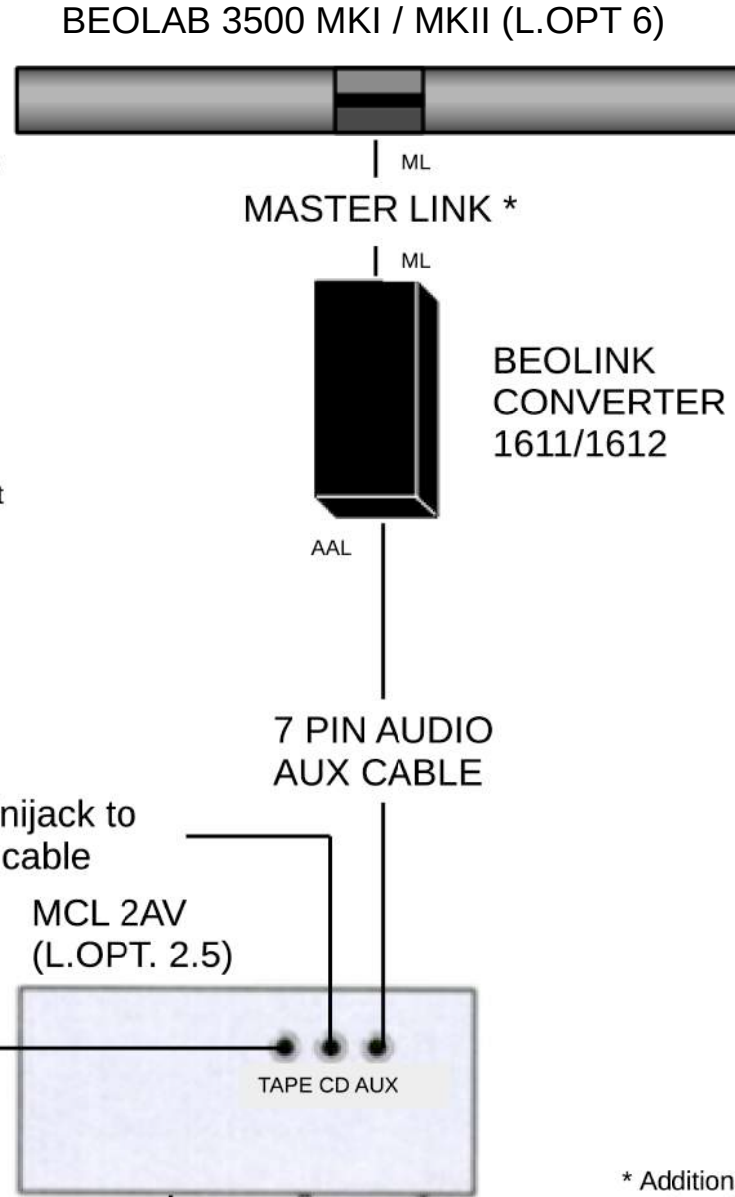

Airport Express

**A.AUX + 7**



3.5mm minijack to 5 pin DIN cable

Chromecast Audio

**A.AUX + 6**



3.5mm minijack to 5 pin DIN cable

SONOS PORT



Phono to MCL screw terminal

**RADIO**  
**PHONO**  
**CD**  
**A.TAPE**  
**A.MEM**

\* Additional Masterlink link room products like Beolab 2000, Beolink Active, Beolink Passive or Beovision can also be used or added in this setup  
The setup will not work if a Beosound with Masterlink is connected as Audio Master